



IO24A DB Connector Wiring


Wire three DB-25 connectors with twin Cat-5 Cable
 Install backshells with cable exiting toward pin 13

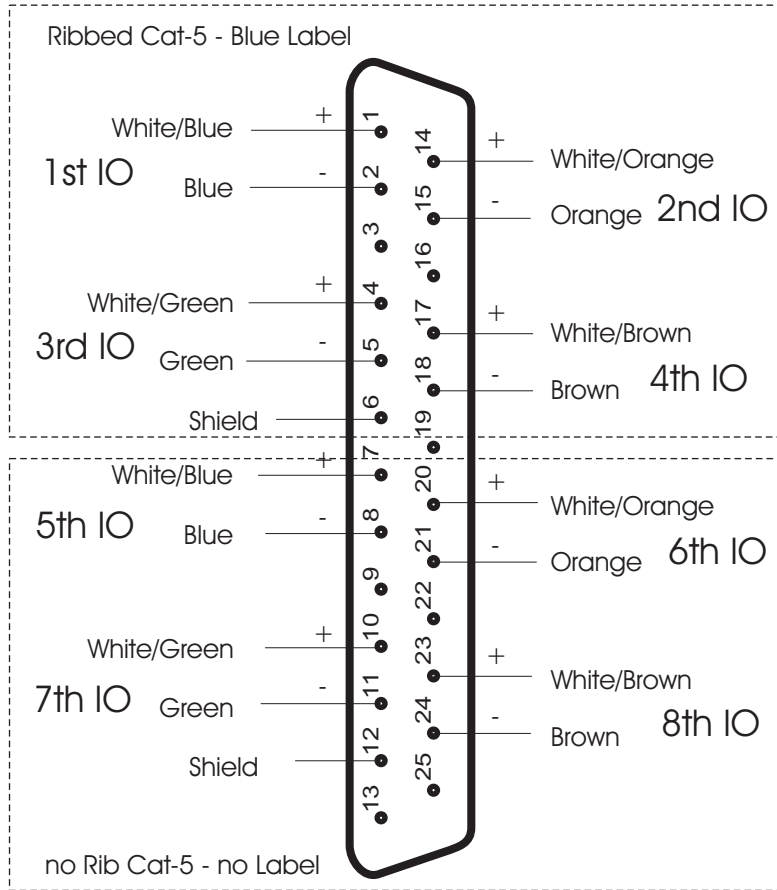

Connector Spacing

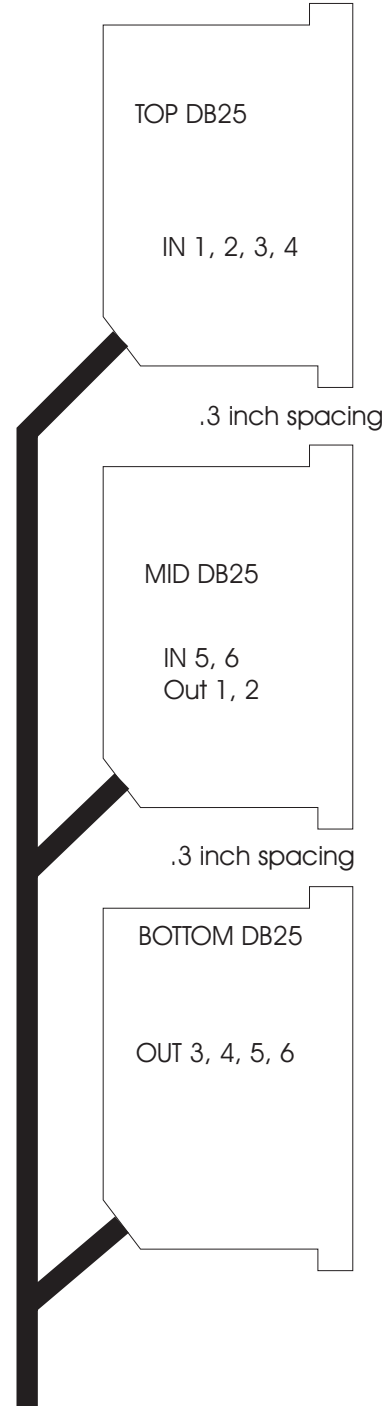


IO24A M66 Block Wiring

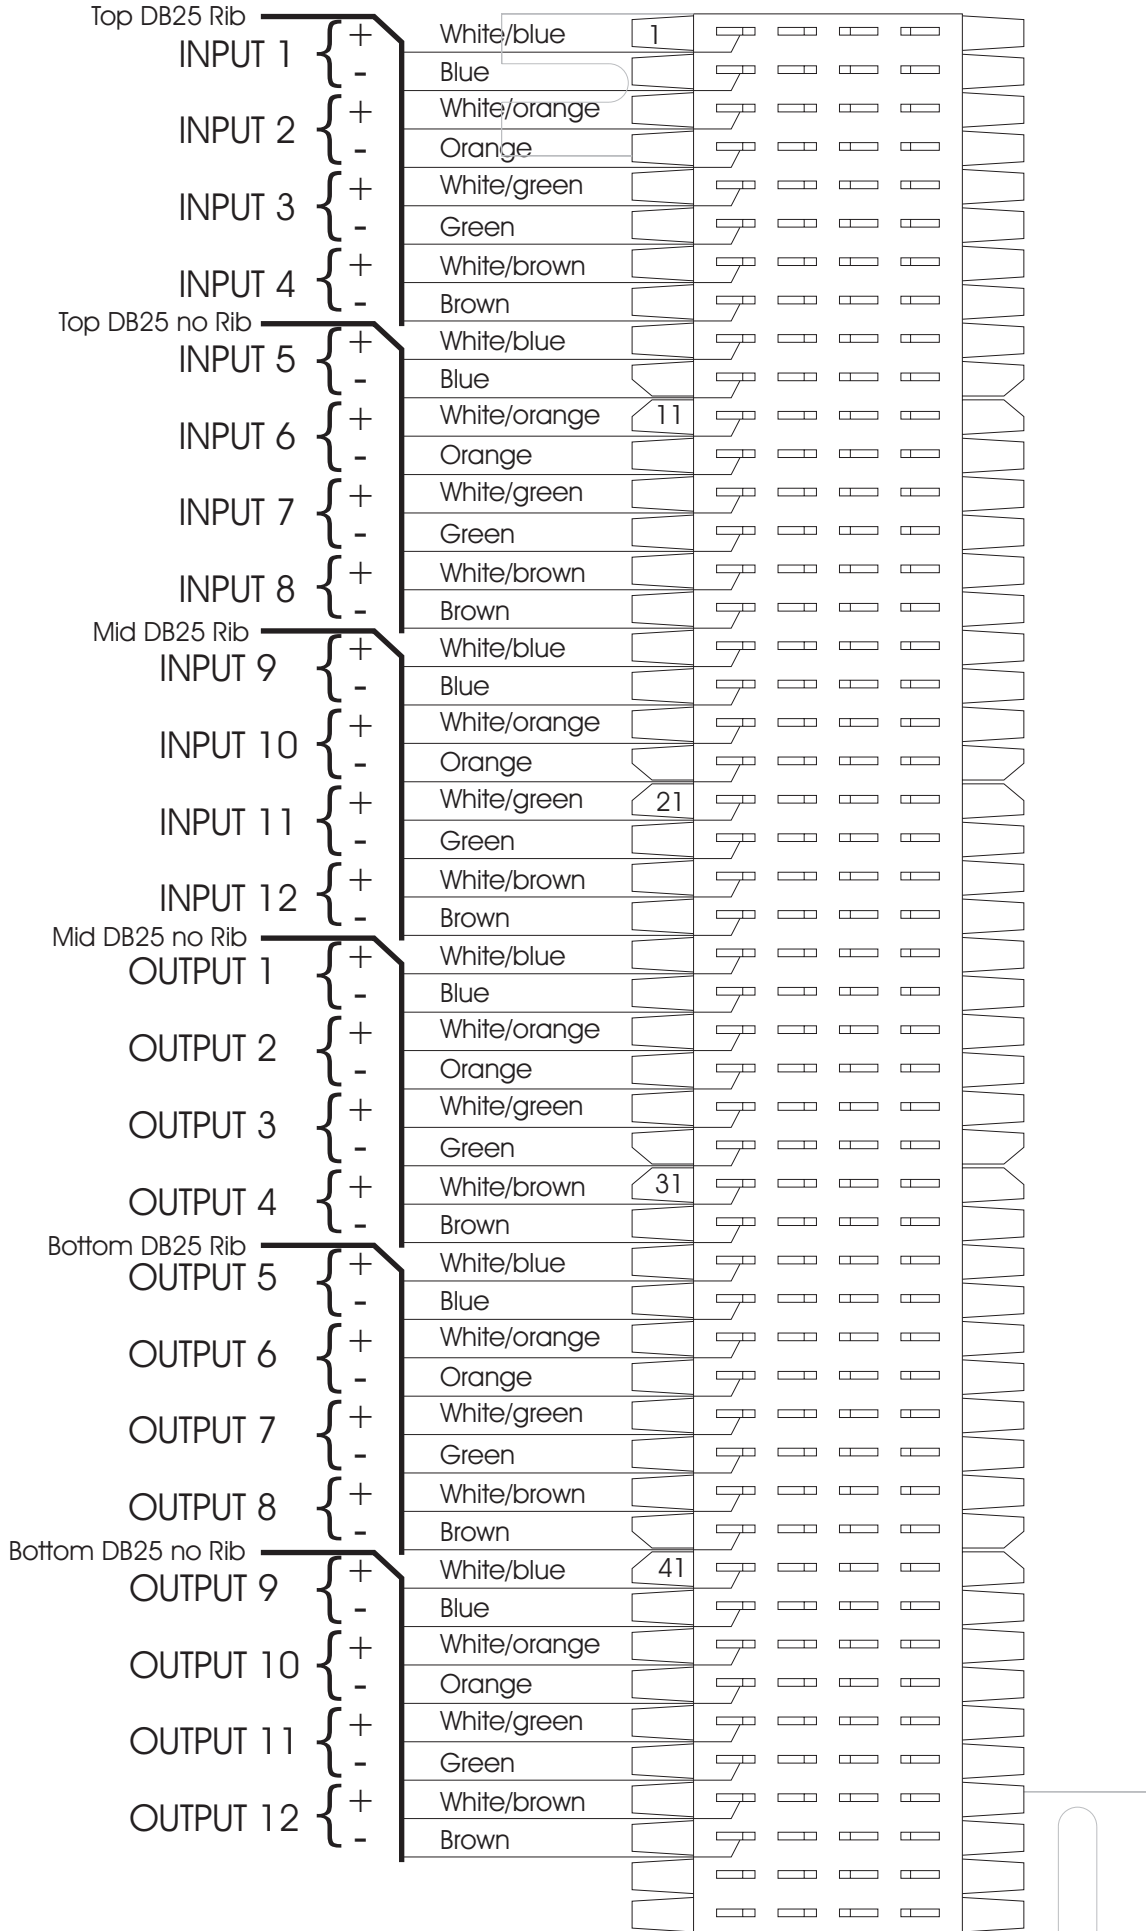


IO8D DB Connector Wiring

Wire three DB-25 connectors with twin Cat-5 Cable
Install backshells with cable exiting toward pin 13

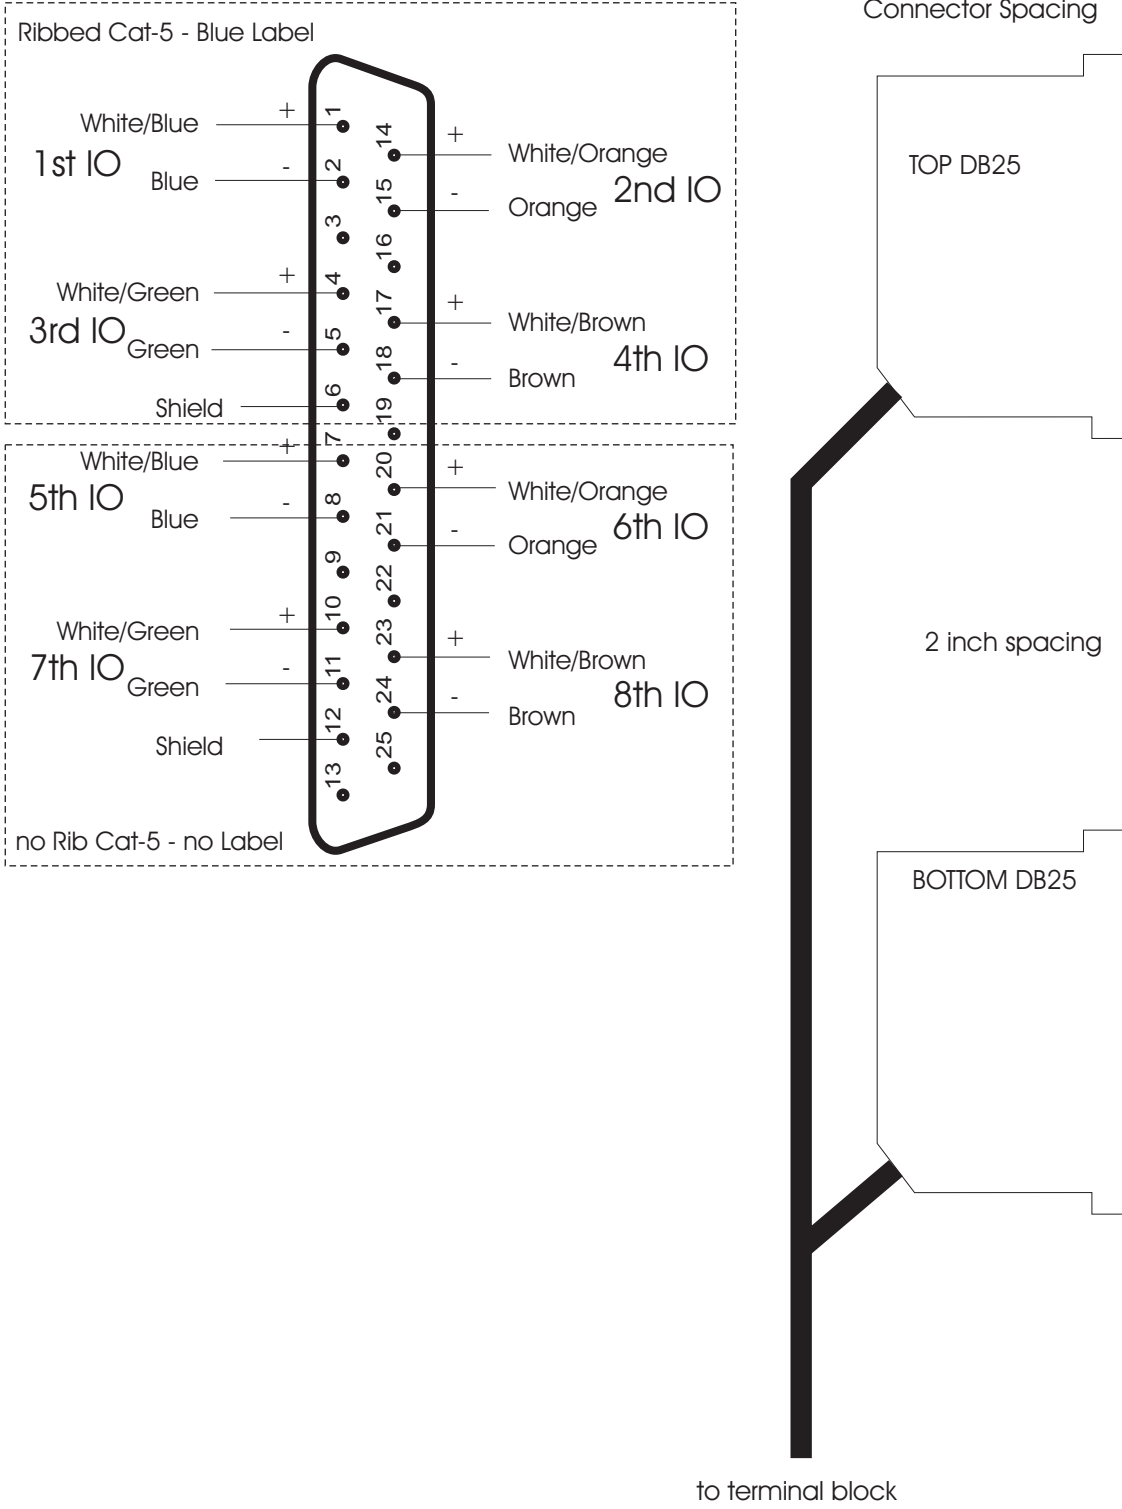


IO8D M66 Block Wiring


Top DB25 Rib

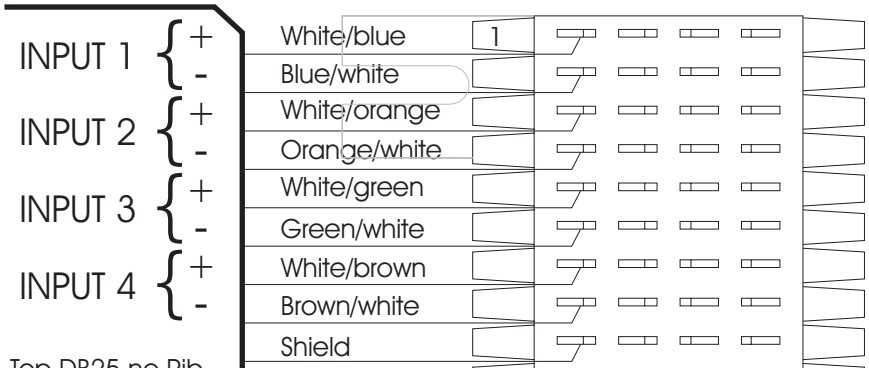


Top DB25 no Rib

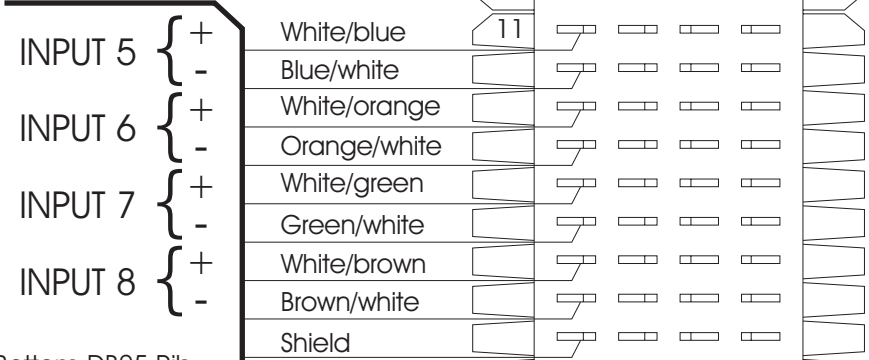


Bottom DB25 Rib

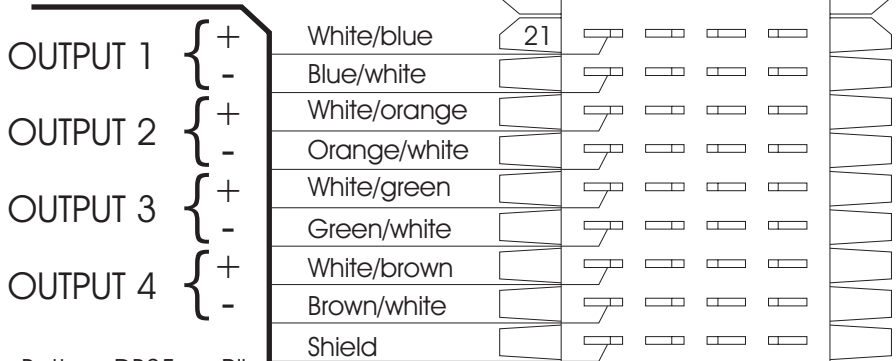

Bottom DB25 no Rib

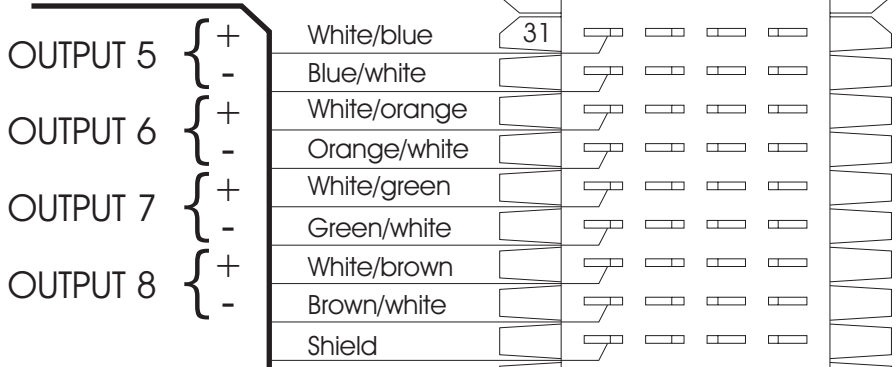


41

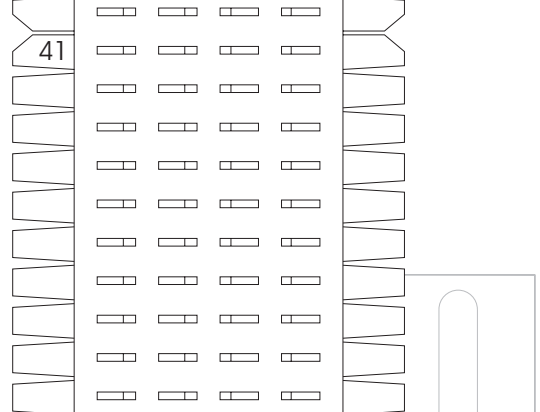


Top DB37 - 25 pair cable

Engine GPI DB Connector Wiring

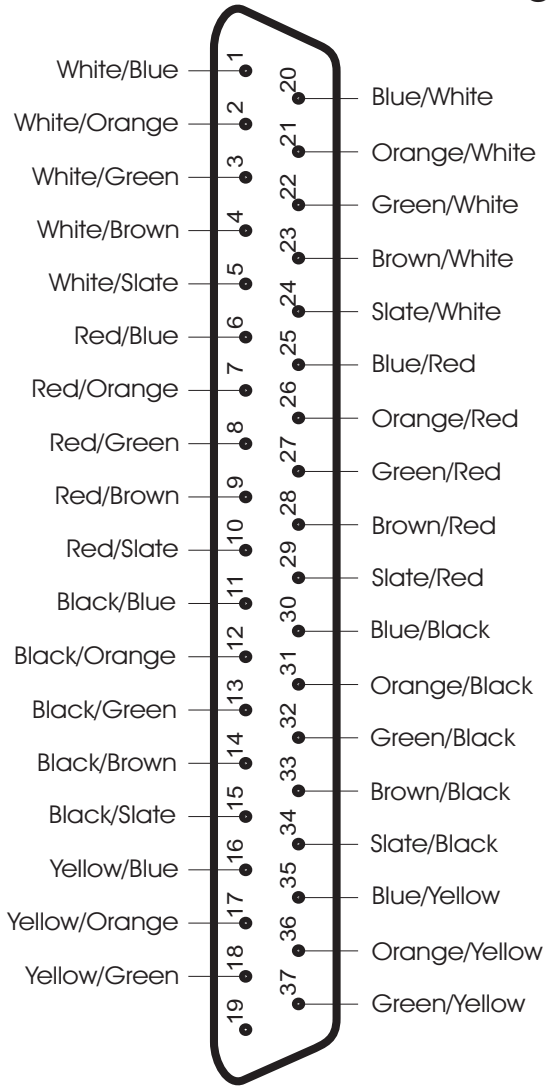


Wire two DB-37 connectors with telco 25-pair cable
Install backshells with cable exiting toward pin 19

Connector Spacing

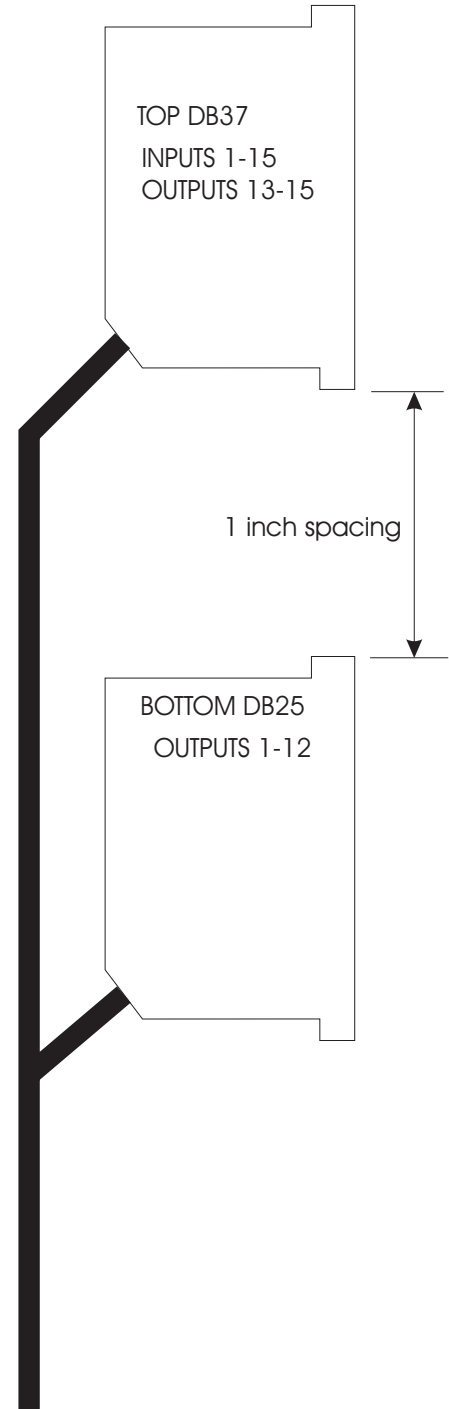


bare end to terminal block

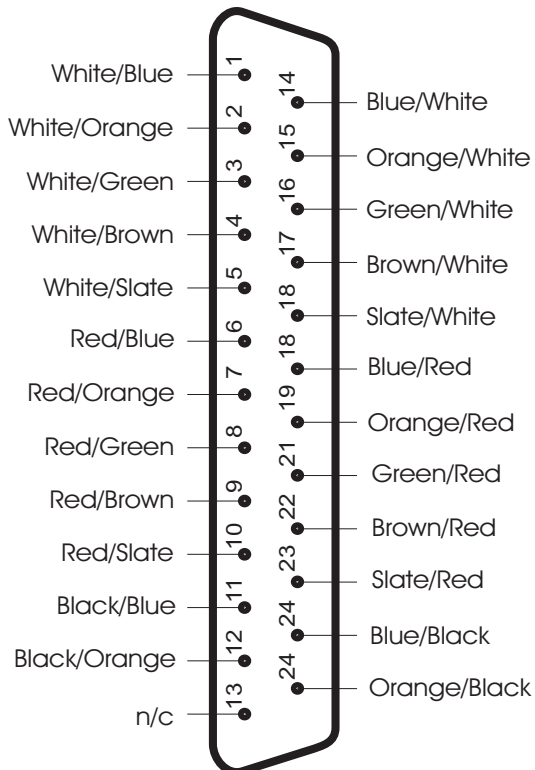

Bottom DB25 - 12 pair cable

BTN12 GPI Connector Wiring


Wire two DB-37 connectors with telco 25-pair cable
Install backshells with cable exiting toward pin 19

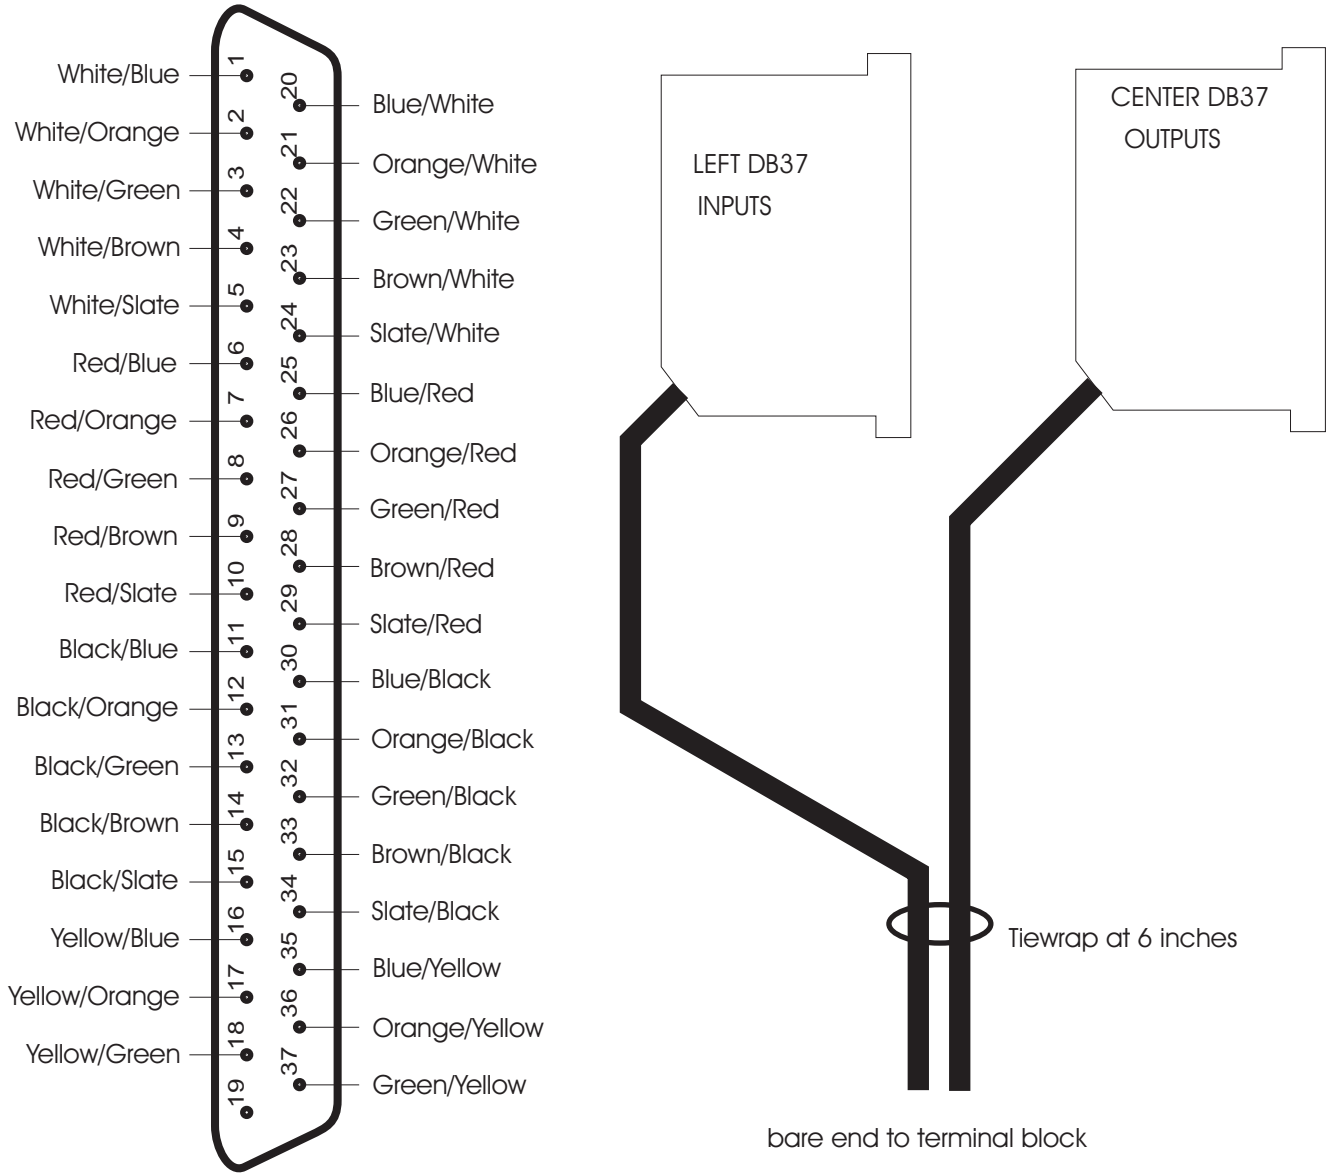



BTN1 2 GPI M66 Block Wiring

Left DB37


Center DB37

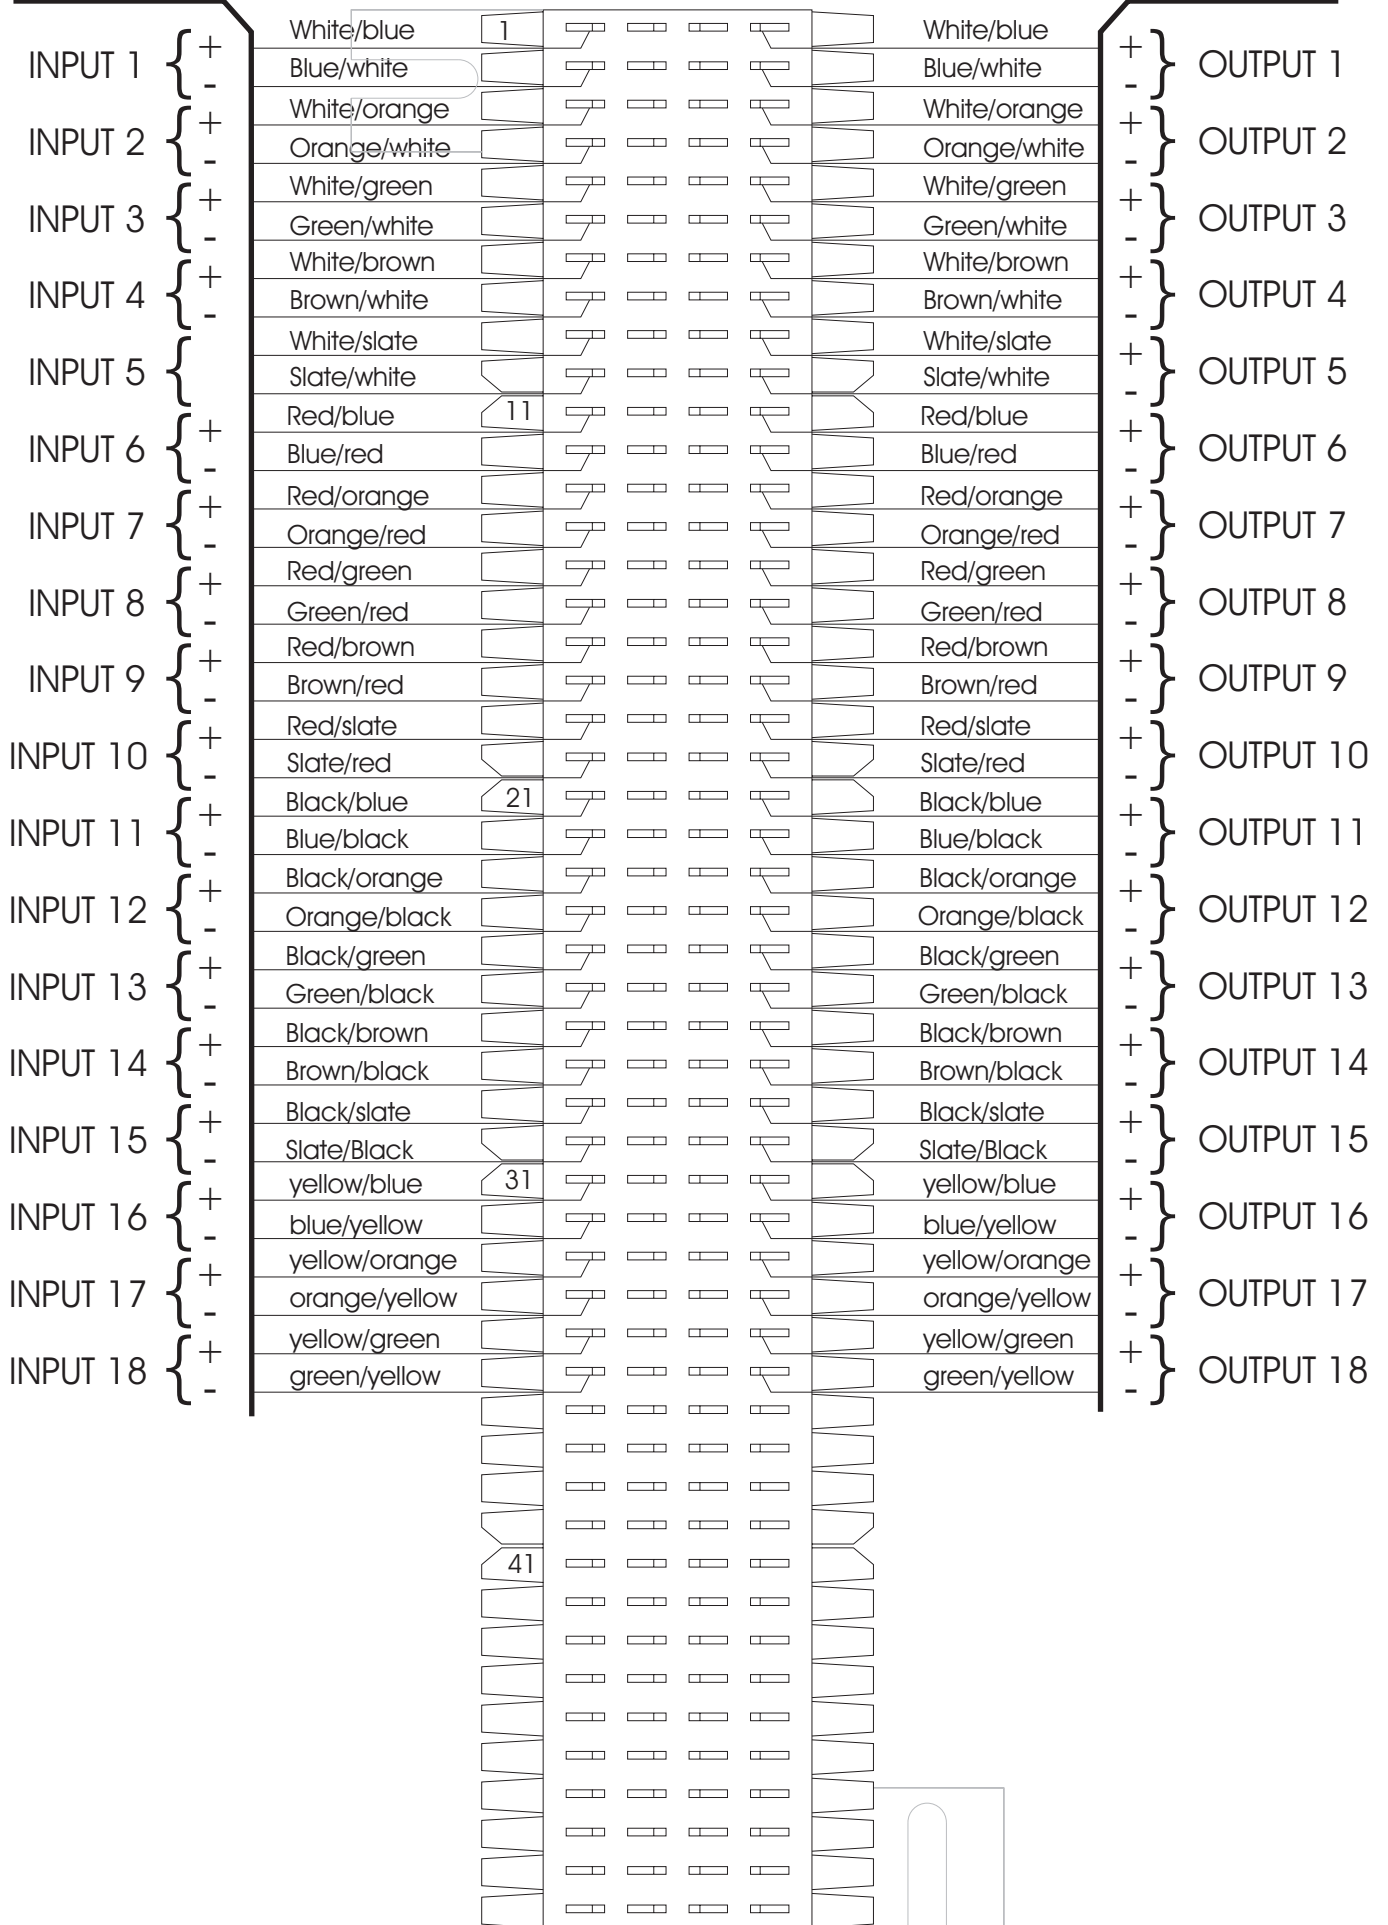

Numix/Roc/Remora GPI DB Connector Wiring

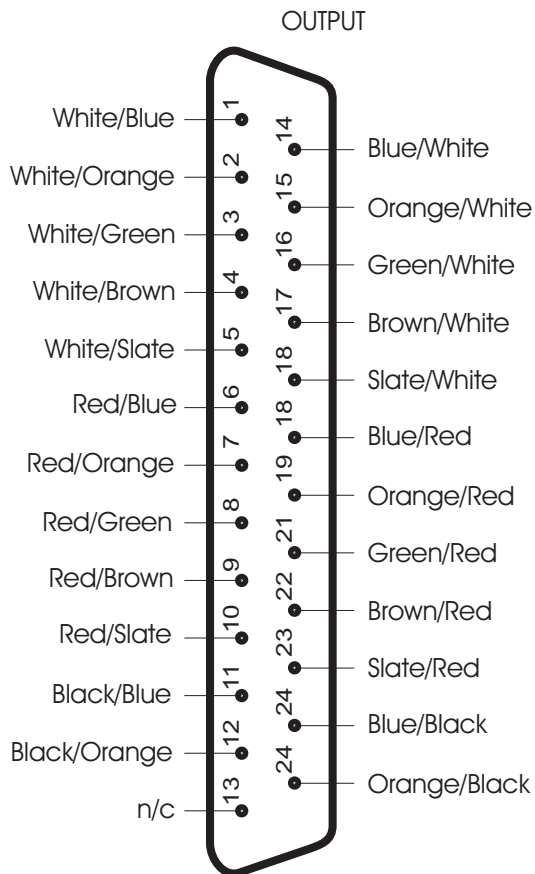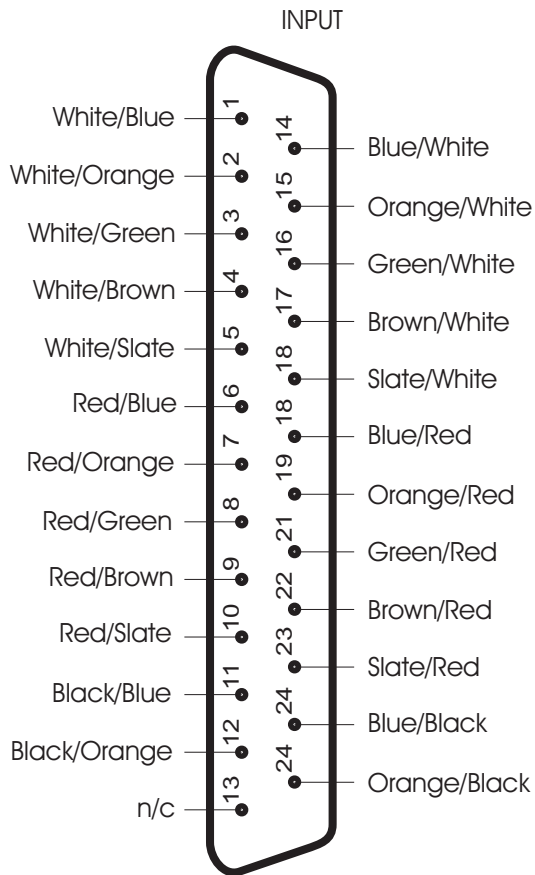


Wire two DB-25 connectors with two telco 12-pair cables

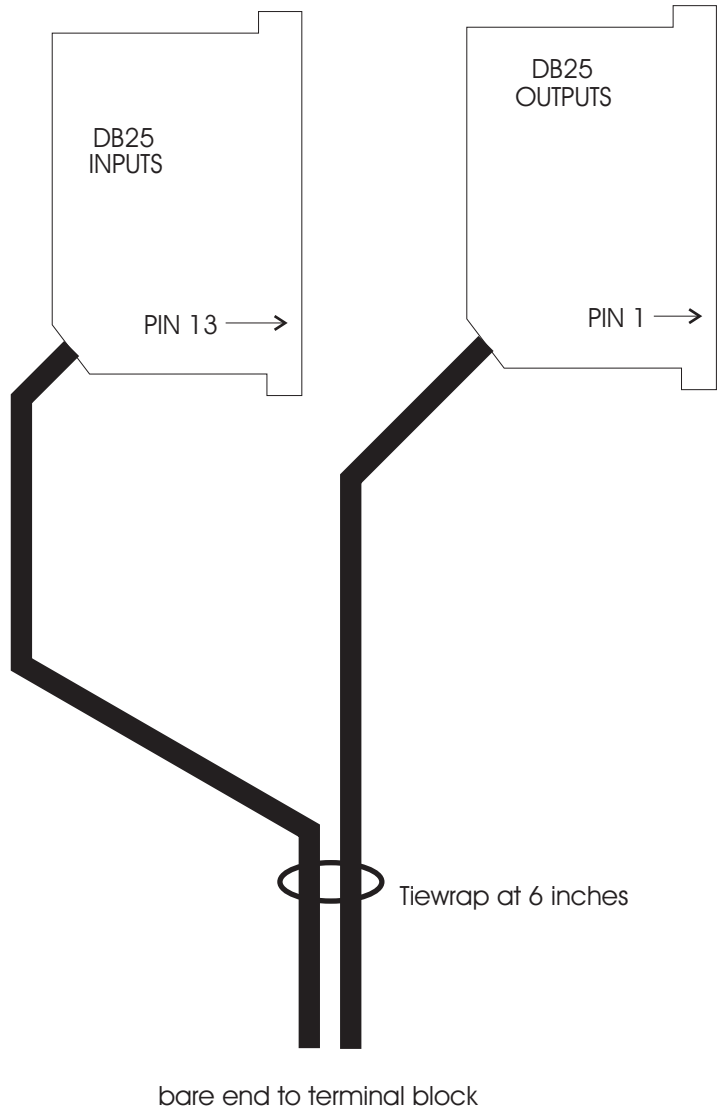

Numix/Rec/Remora GPI M66 Block Wiring

INPUT DB25

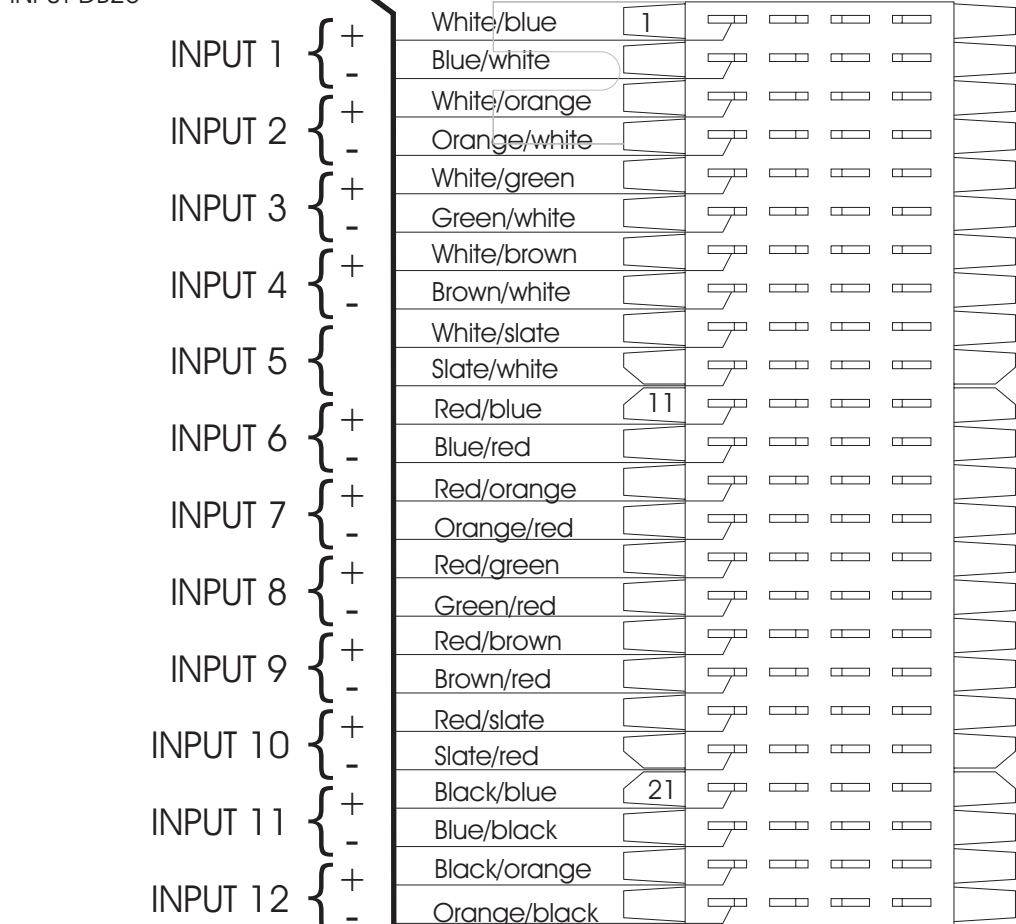

OUTPUT DB25

